

## Product Change Notification

Document ID: DID-061426-02

Date: March 05, 2026

### Product(s) affected:

Product number	Product name	From version no.
NA	AADI Real-Time Collector	8.1.18
4807	AADI Real-Time Collector License	8.1.18

**Purpose: To give the user better experience when using the software**

### General change description:


#### Chinese language support

- English or Chinese language
- Output from sensors is not translated



#### New configuration UI based on sensor focus instead of configuration category focus

- All configuration categories placed under each sensor
- Open or close each category independently

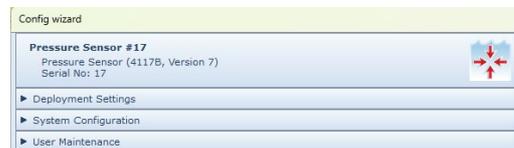

#### Manual resizing of configuration dialogs for better UI experience

- Expand the window to full screen, both height and width
- Easier to get full overview without scrolling

#### Offline mode in configuration and layout (read only mode)

- Able to read configuration and layout after disconnecting
- RTC remember config from last connection



Read configuration and layout while recorder is running (read only mode)

- Able to read configuration and layout even when recorder is running
- Not able to make changes when running

Manual resending of data to connected clients

- This is useful for users with multiple connections.

Terminal for routed connections

Message log stored to file for recovery on application restarts

- Saves last 500 messages to/from sensor even with restart
- Useful for troubleshooting on individual connections

Removed licensing

- Free software. No license needed
- Available for download at Aanderaa.com

### **Specific changes:**

Please note that you need to close and remove/uninstall any previous versions of AADI Real-Time Collector before installation.

Download newest version of AADI Real-Time Collector

<https://aanderaa1.xyleminc.com/AADI%20Real-Time%20Collector/>

Download old version (legacy v7.0.15) version

<https://aanderaa1.xyleminc.com/AADI%20Real-Time%20Collector%20legacy/>

Aanderaa Data Instruments

Mr. Jarle Heltne

Product Manager

Email: [aanderaa.support@xylem.com](mailto:aanderaa.support@xylem.com)